


# Washoe Valley Water Tower CMS3009


## Parts Depiction and Window Locator

Please Visit our website [www.coloradomodel.com](http://www.coloradomodel.com) for painting and contructions hints, as well as how to prepare your structure for outdoor use, our customer gallery, and many other suggestions and comments.

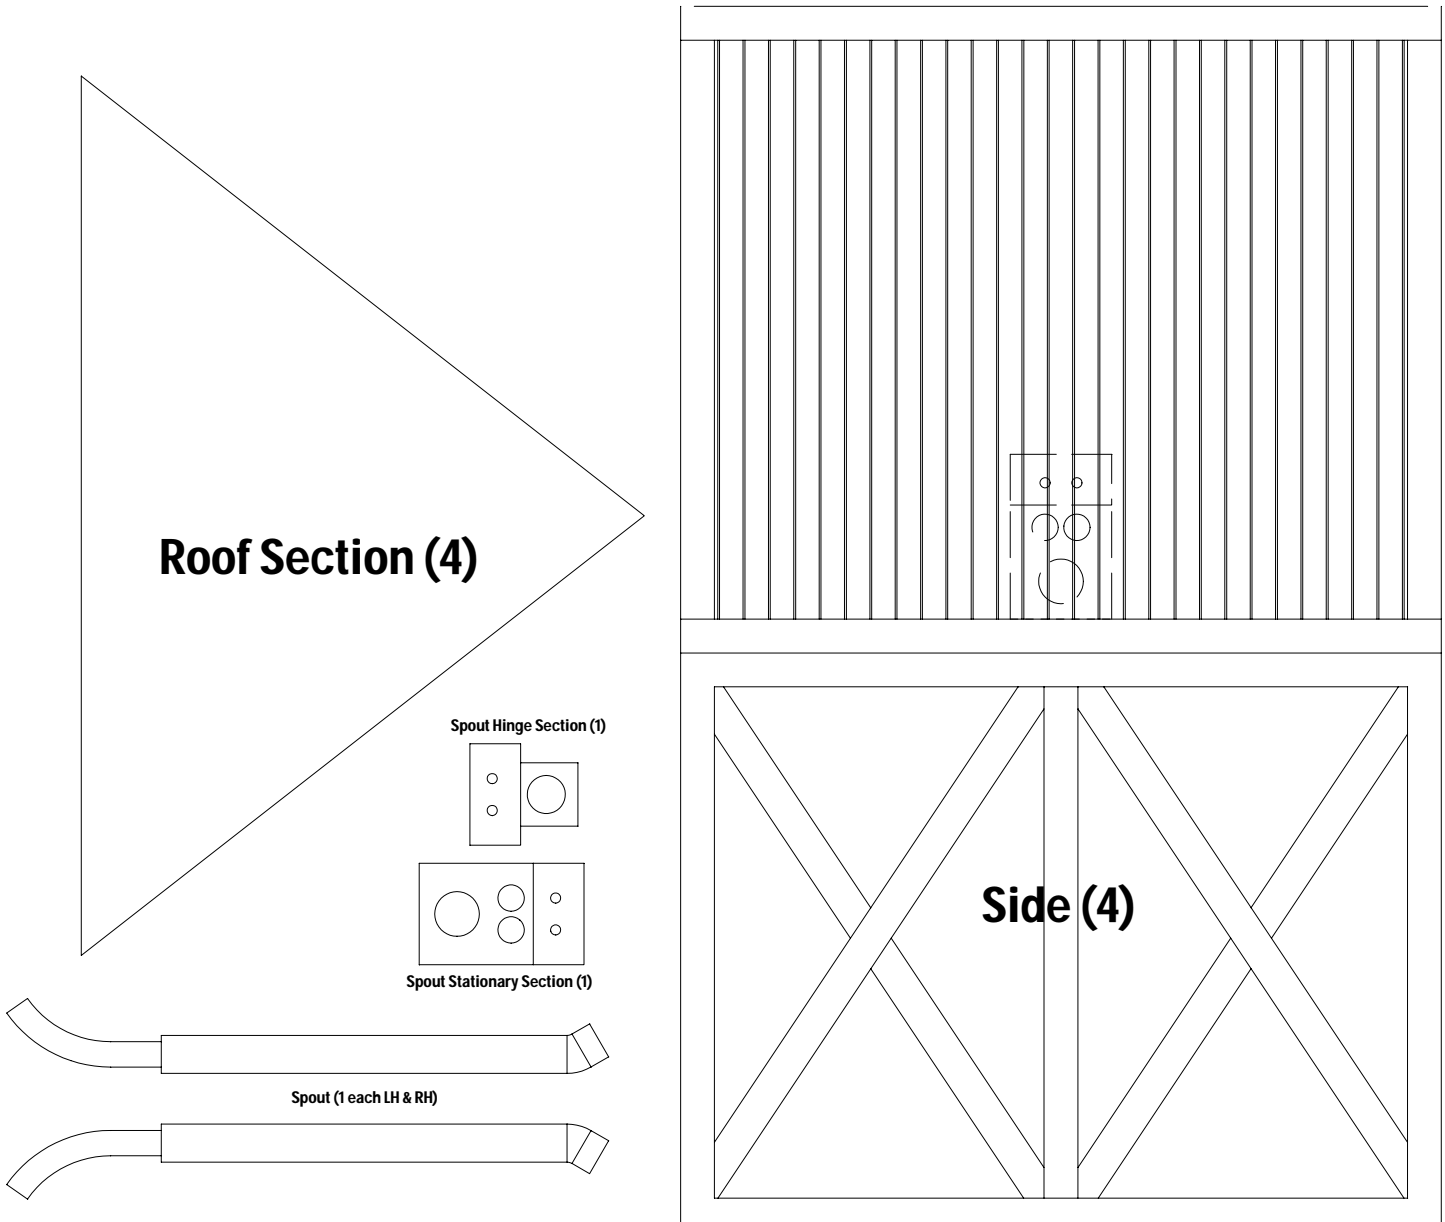

**Roof Section (4)**

**Spout Hinge Section (1)**

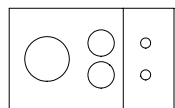


**Spout Stationary Section (1)**

**Spout (1 each LH & RH)**

**Side (4)**

## Roof Assembly

Also included:  
 1 - 1/2" x 1/2" brass hinge  
 2 - 2/56 x 5/8" hex head machine screw  
 2 - 2/56 x 1/4" hex head machine screw  
 4 - 2/56 brass nuts

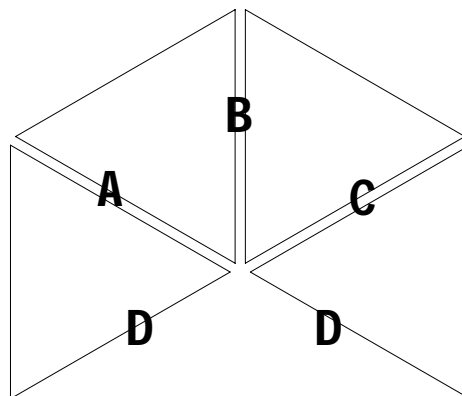

Place 4 roof sections on a flat surface with sections touching at A, B, & C. Make sure the shingle lines are parallel to the outside edge of each section. Tape each seam securely with 3M Blue Painters Tape. Fold the four sections so that the two outside sections touch at D. Tape seam D so the sections are touching. Cement from behind after making sure that the shingles are properly oriented and the seams are securely taped.